


STEAM TRAP

MODEL PB 1750

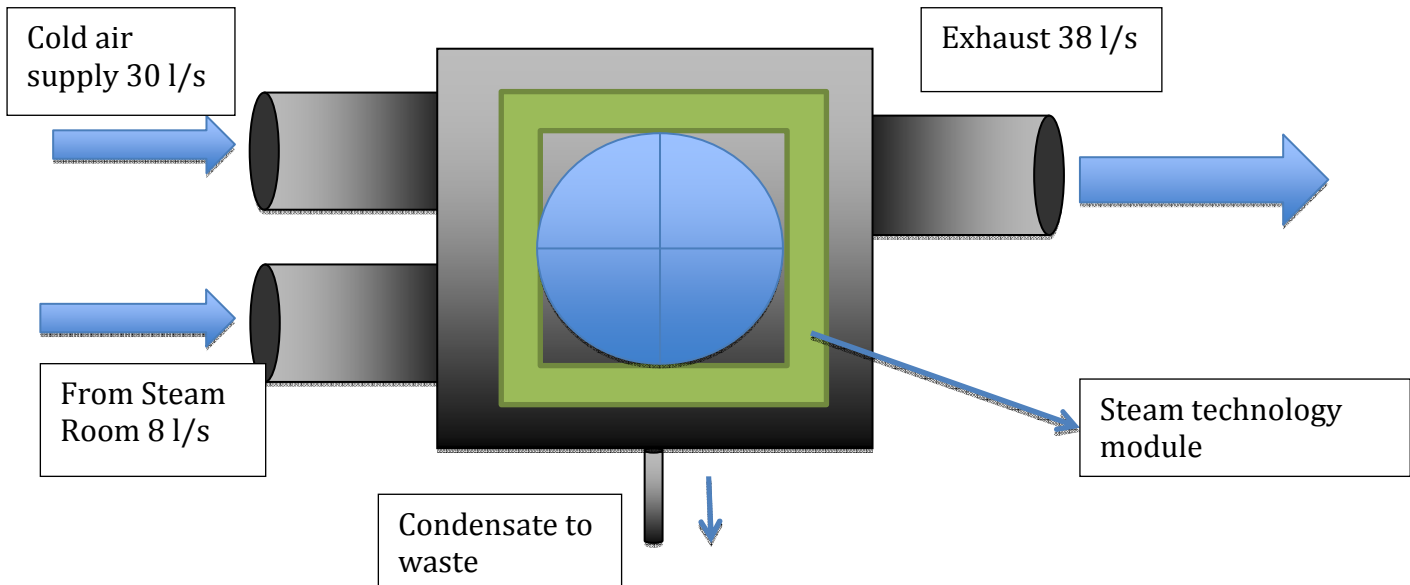

Installation Instructions.

- 1, Mount unit with straps fastened to top sides of box.
- 2, Cold air supply 30 l/s connected to top spigot.
- 3, Exhaust 38 l/s connected to exhaust duct
- 4, Fit clear P-Trap to drain and check condensate is flowing to waste when steam room is operating
- 5, Fit PVC pipe from steam room to spigot on bottom.

Service

Once per year unit needs to be shut down and 0-3 Pumped into supply side for 10 minutes

Warning

If the unit is found to have loose parts rattling inside please return to base for repairs under warranty. Do not attempt to open the box as spring clips will come loose and warranty will be null and void.